


WATT TRANSDUCERS

CONNECTION DIAGRAMS/DIMENSIONS


MODEL AGW

WATT TRANSDUCERS


SINGLE-PHASE CONNECTIONS (ONE ELEMENT)

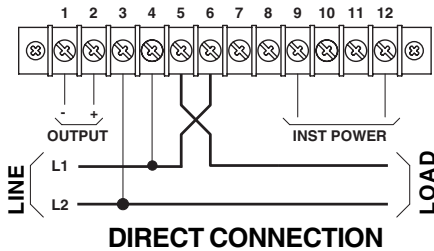

DIRECT CONNECTION

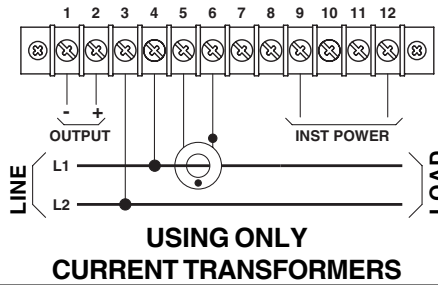


USING ONLY CURRENT TRANSFORMERS

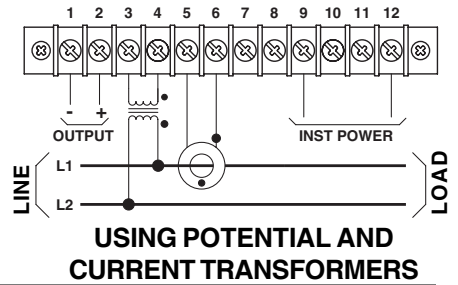


USING POTENTIAL AND CURRENT TRANSFORMERS


THREE-PHASE, THREE-WIRE CONNECTIONS (2 ELEMENT)

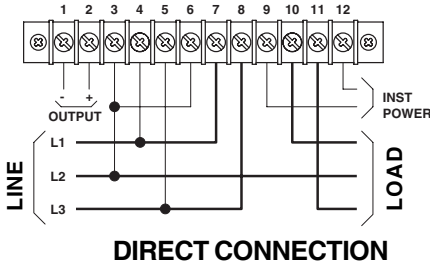

DIRECT CONNECTION

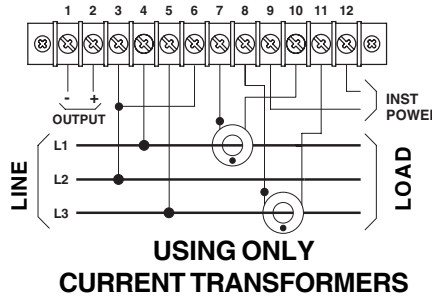


USING ONLY CURRENT TRANSFORMERS

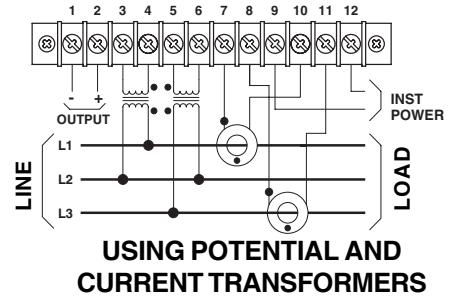


USING POTENTIAL AND CURRENT TRANSFORMERS


THREE-PHASE, FOUR-WIRE CONNECTIONS (2 1/2 ELEMENT)

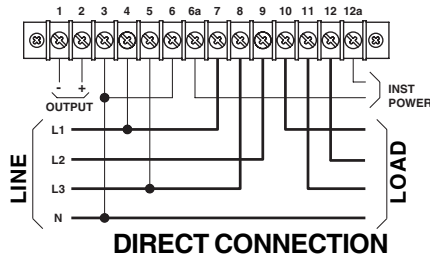

DIRECT CONNECTION

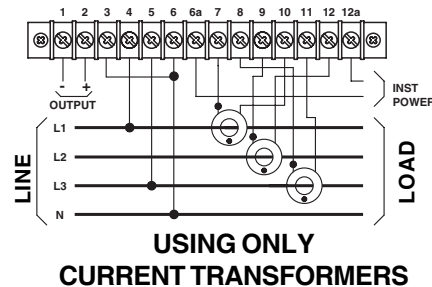


USING ONLY CURRENT TRANSFORMERS

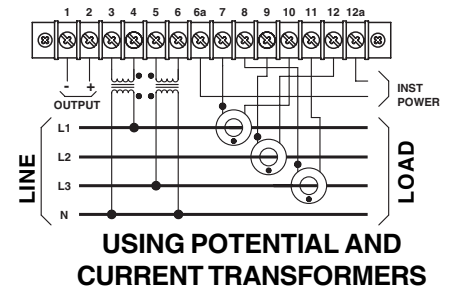


USING POTENTIAL AND CURRENT TRANSFORMERS


THREE-PHASE, FOUR-WIRE CONNECTIONS (THREE ELEMENT)

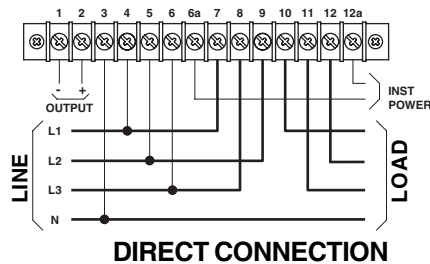

DIRECT CONNECTION

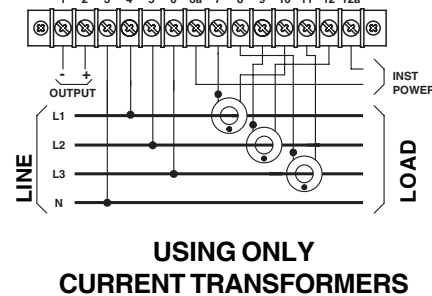


USING ONLY CURRENT TRANSFORMERS

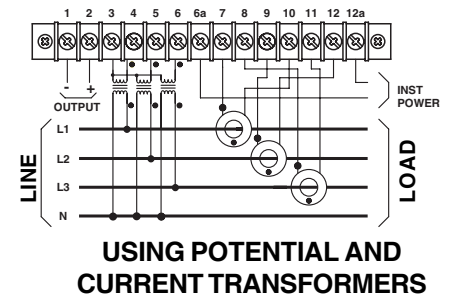

USING POTENTIAL AND CURRENT TRANSFORMERS

DIMENSIONS

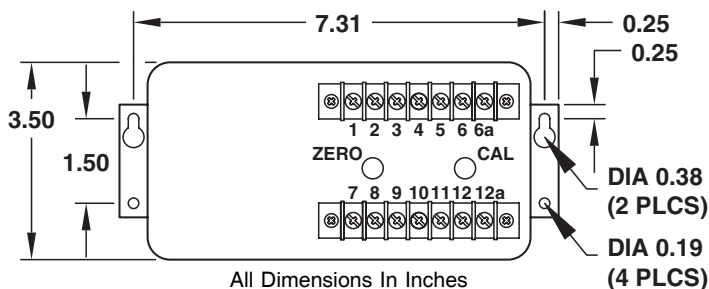

All Dimensions In Inches

CASE HEIGHT 5.88"
 1PH 2W 2.4 LBS
 3PH 3W 3.3 LBS
 3PH 4W 4.4 LBS

FLEX-CORE®
 Div. Morlan & Associates, Inc.
 6625 McVey Blvd. Columbus, Ohio 43235

WWW.FLEX-CORE.COM
 sales@flex-core.com

PHONE (614) 889-6152
 TECH. ASSISTANCE (614) 876-8308
 FAX # (614) 876-8538