

FREQUENCY TRANSDUCERS

FREQUENCY TRANSDUCER

MODEL AFT

FOR USE ON POWER FREQUENCY APPLICATIONS

FEATURES

- High accuracy over wide frequency ranges.
- Provides analog output which is proportional to the instantaneous frequency of the input signal.
- UL and CUL listed.

APPLICATIONS

- For use on any application that requires indication or recording of instantaneous frequency variations.
- Each model covers all input voltages from 3V to 575V.

INPUT FREQUENCY (Hz)	STANDARD OUTPUTS MODEL NUMBER AFT-					
	0-1mA	0-10Vdc	0-5Vdc	4-20mA	4-20mA*	0-20mA
45 to 55	050-10B	050-10D	050-10X5	050-10E	050-10E2	050-10EA
55 to 65	060-10B	060-10D	060-10X5	060-10E	060-10E2	060-10EA
375 to 425	400-50B	400-50D	400-50X5	400-50E	400-50E2	400-50EA
0-10	010B	010D	010X5	010E	010E2	010EA
0-55	055B	055D	055X5	055E	055E2	055EA
0-65	065B	065D	065X5	065E	065E2	065EA
0-100	100B	100D	100X5	100E	100E2	100EA
0-425	425B	425D	425X5	425E	425E2	425EA
0-1000	1000B	1000D	1000X5	1000E	1000E2	1000EA



*Output is loop powered from 15-40Vdc (also requires instrument power).
115VAC, 50/60 Hz instrument power is required on all units.
OPTIONAL 230VAC INSTRUMENT POWER - ADD SUFFIX "-22"
Weight: 1.5 lbs.

ORDERING INFORMATION

Example: 55-65 Hz. input, with
0-5Vdc output
AFT-060-10X5

MODEL AFT SPECIFICATIONS


INPUT

Frequency Range See table
Voltage Range 3-575V
Burden 1.25VA
Overload 575V
Dielectric Test
Input to Output/Inst. Power 3250VAC
Inst. Power to Output 2200VAC
Case to Input/Output/Inst. Power 2200VAC
Instrument Power
..... 115VAC, 50/60Hz, $\pm 15\%$, 15VA max.
-22 option 230VAC, 50/60Hz, $\pm 15\%$, 15VA max.


OUTPUT

ACCURACY $\pm 0.1\%$ span
Output Loading (OHMS)
1mA 0-10K
10V & 5V 2K min.
4-20mA, 0-20mA 0-500
Output Ripple $\pm 1.0\%$ F.S.
Response Time 400 milliSeconds
Temperature Range -20°C to 60°C
Temperature Effect $\pm 0.005\%/^{\circ}\text{C}$

CONNECTION DIAGRAMS

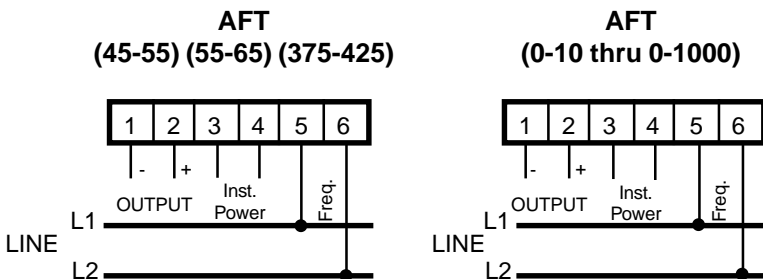

CASE DIMENSIONS

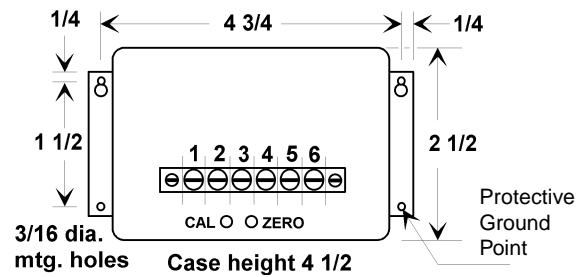

ALL DIMENSIONS IN INCHES

FLEX-CORE®

Div. Morlan & Associates, Inc.

6625 McVey Blvd. Columbus, Ohio 43235

WWW.FLEX-CORE.COM

flexcore@msn.com

PHONE (614) 889-6152

TECH. ASSISTANCE (614) 876-8308

FAX # (614) 876-8538