

SPECIFICATIONS

- Model 125 Terminals are Brass Studs No. 8-32 UNC
- Model 126 Terminals are Brass Studs No. 10-32 UNC
(Each with flat washer, lockwasher and regular nut.)

APPLICATIONS

- For use with AGW series and AGH series Watt and Watt/Watt Hour Transducers.
- Ideal for use with Ammeters, Set Point Relays, Watt, Var. Current Transducers and Watt Hour Meters.

Frequency	50 to 400Hz
Insulation Class	0.6kV 10kV BIL Full Wave
Weight	Model 1253 Lbs.
	Model 1265.5 Lbs.
Mounting Brackets	Model 125P/N 0221B00231
	Model 126P/N 0221B01529
Bus Bar Mounting Kit...	Model 125P/N 0221A26076
Manufactured to meet the requirements of ANSI/IEEE C57.13	




**MADE
IN U.S.A.**




APPLICATION AND ORDERING DATA

Catalog Number	Current Ratio	ANSI Metering Class Accuracy at 60Hz					Secondary Winding Resistance (Ω @ 75°C)	Continuous Thermal Rating Factor	
		B0.1	B0.2	B0.5	B0.9	B1.8		@30°C	@55°C
125-801	800:5	0.3	0.3	0.6	1.2	2.4	0.116	1.5	1.33
125-102	1000:5	0.3	0.3	0.3	0.6	1.2	0.187	1.5	1.33
125-122	1200:5	0.3	0.3	0.3	0.6	1.2	0.223	1.5	1.33
125-152	1500:5	0.3	0.3	0.3	0.3	0.6	0.285	1.5	1.33
125-162	1600:5	0.3	0.3	0.3	0.3	0.6	0.304	1.5	1.33
125-202	2000:5	0.3	0.3	0.3	0.3	0.6	0.280	1.5	1.0
125-252	2500:5	0.3	0.3	0.3	0.3	0.6	0.351	1.33	1.0
125-302	3000:5	0.3	0.3	0.3	0.3	0.6	0.421	1.33	1.0
125-352	3500:5	0.3	0.3	0.3	0.3	0.3	0.491	1.33	1.0
125-402	4000:5	0.3	0.3	0.3	0.3	0.3	0.696	1.0	0.8
126-152	1500:5	0.3	0.3	0.3	0.3	0.3	0.434	1.5	1.0
126-162	1600:5	0.3	0.3	0.3	0.3	0.3	0.462	1.5	1.0
126-202	2000:5	0.3	0.3	0.3	0.3	0.3	0.578	1.33	1.0
126-252	2500:5	0.3	0.3	0.3	0.3	0.3	0.904	1.0	0.8
126-302	3000:5	0.3	0.3	0.3	0.3	0.3	0.722	1.33	1.0
126-322	3200:5	0.3	0.3	0.3	0.3	0.3	0.770	1.33	1.0
126-352	3500:5	0.3	0.3	0.3	0.3	0.3	0.842	1.0	0.8
126-402	4000:5	0.3	0.3	0.3	0.3	0.3	0.962	1.0	0.8
126-502	5000:5	0.3	0.3	0.3	0.3	0.3	1.203	1.0	0.8

MODEL 125 DIMENSIONS

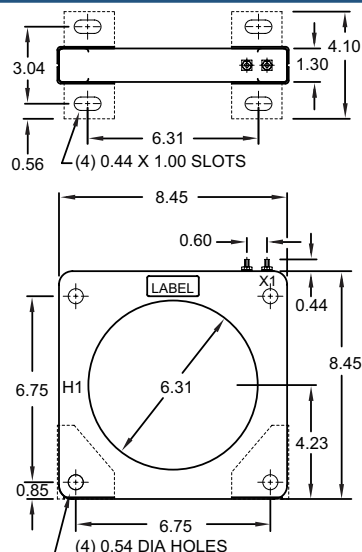

MODEL 126 DIMENSIONS

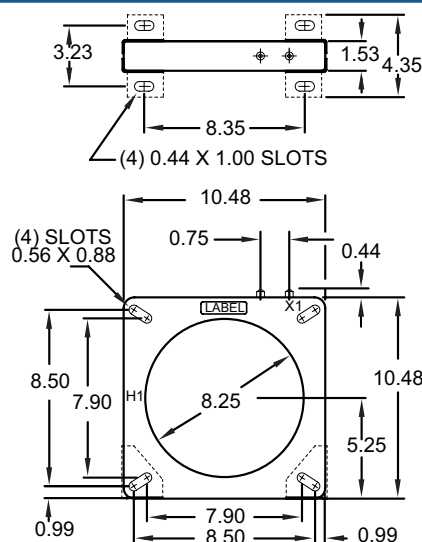

All Dimensions In Inches

FLEX-CORE®

Div. Morlan & Associates, Inc.

4970 Scioto Darby Rd. Hilliard, Ohio 43026

WWW.FLEX-CORE.COM

sales@flex-core.com

PHONE (614) 889-6152

TECH. ASSISTANCE (614) 876-8308

FAX # (614) 876-8538